



Canon PowerShot G1 X Back Camera Casing Replacement

This guide will show you how to remove and replace the back camera casing on the Canon PowerShot G1 X.

Written By: Joseph Cosgrove



INTRODUCTION

To reassemble the device follow these steps in reverse order.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Camera Casing



- To begin removing the back camera casing, unscrew the Phillips screw underneath the panel covering the USB connections on the side of the camera.
- Remove the screw located directly beneath the USB cover located in the second photo.

Step 2



- After removing the first screw flip to the bottom side of the camera and unscrew the two screws located toward the back side of the casing. The screw on the front side can be left in.

Step 3



- Now flip to the opposite side of the USB panel screw and unscrew the two screws holding the small speaker cover portion of the camera.

Step 4



- The last screw is located towards the top side of the back of the camera next to the view finder.

Step 5



- Remove the side panel covering the speaker by gently pulling it away from the camera. You can also use spudgers to create a lever to help remove the panel.

Step 6



- Remove the back casing by gently pulling. You could also use spudger to create a lever to help pry it off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 09:11:41 AM.